


Data


Current input	11.5 amps.
Fan speed at 12 V	2300/min

Removal

- 1 Disconnect battery.
- 2 Pull double coupling (27) on stiffening at front left in engine compartment from clip (10) and loosen plug connection.
- 3 Expose electric line up to supplementary fan while loosening cable bands.

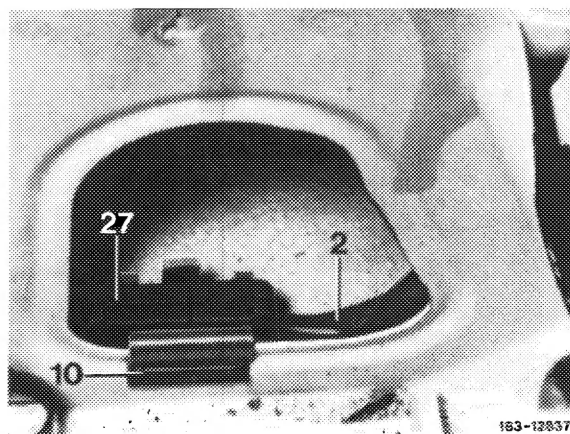

- 4 Unscrew screw (4) and clamps (5).
- 5 Unscrew screw (7) and put strut (6) slightly aside. Then remove supplementary fan.
- 6 Unscrew holder (3) from supplementary fan.

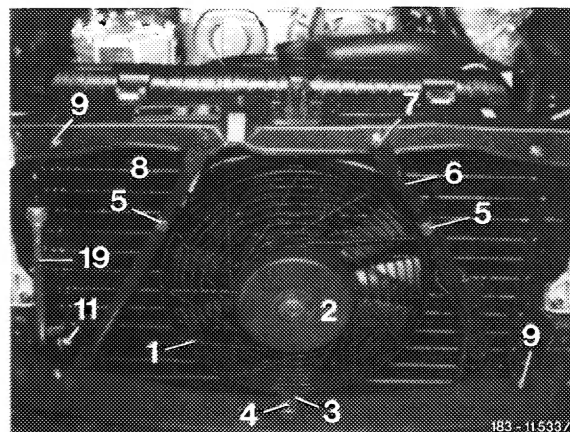

Installation

- 7 Screw holder (3) to supplementary fan.
- 8 Install supplementary fan, attach to strut (6) and to cross member. Reattach strut (6).
- 9 Install harness up to clip (10) and attach.
- 10 Connect 2-point coupler and fasten with clamp (10).

Check supplementary fan for function, for this purpose pull the two flat plugs from temperature switches (14 or 15) and connect to each other (connecting short).

- 11 Check direction of rotation of supplementary fan. Fan is rotating clockwise; if direction of rotating is wrong, interchange jacks in 2-point plug (27).